 


STACK LIGHT RIFLE



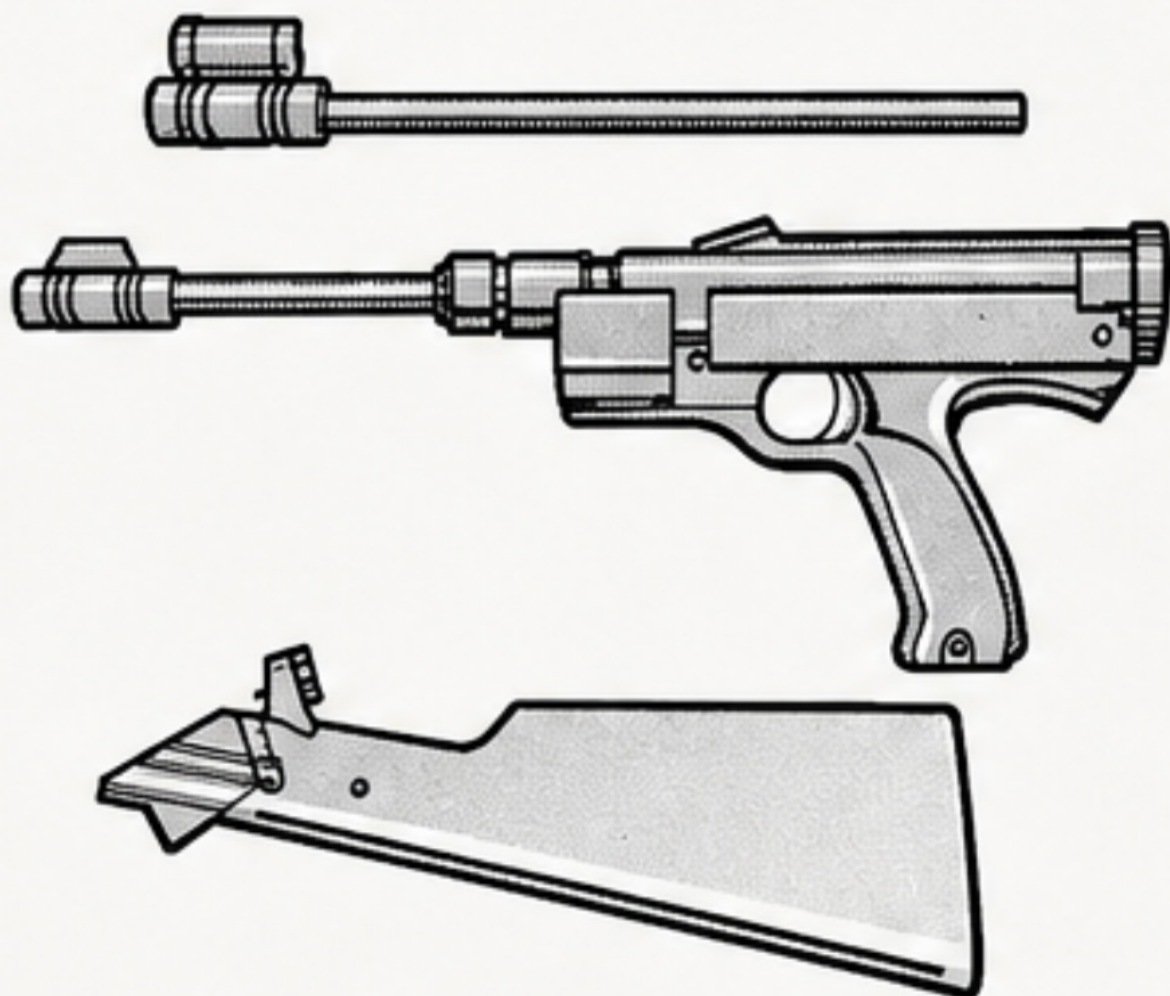


Instructions for use


STACK LIGHT RIFLE

INSTRUCTIONS FOR USE



Switch OFF your Computer (Never connect with your computer ON). Connect the rifle connector's as shown below for your model of computer.

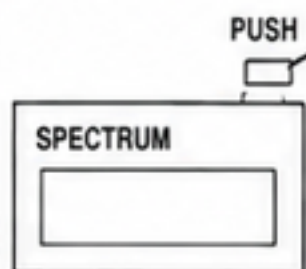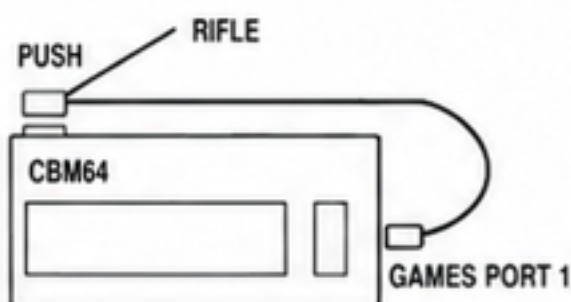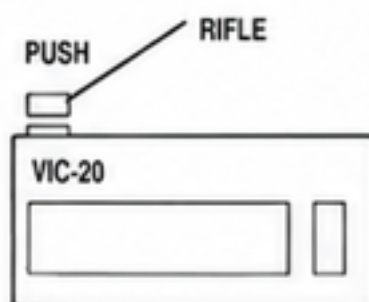


Position your TV set so that little or no daylight or other unwanted light falls on the screen.

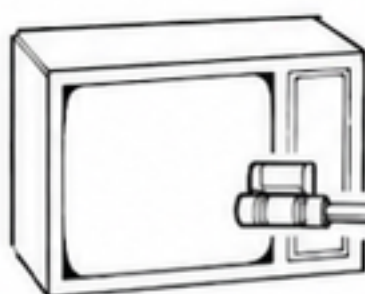


WRONG
(Light falls on screen)

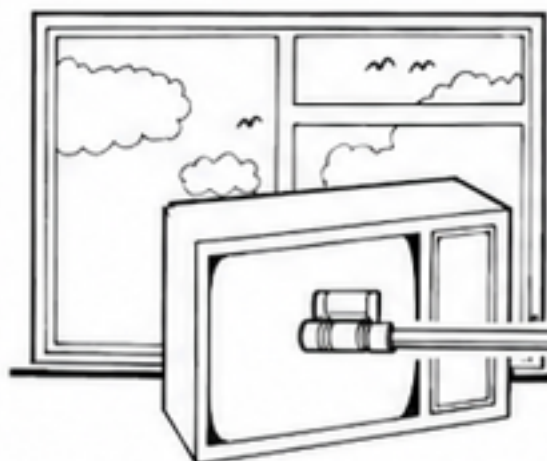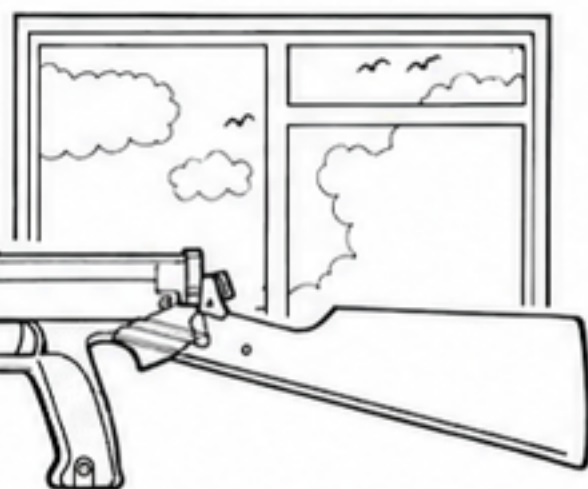

CORRECT
(TV set blocks window light)

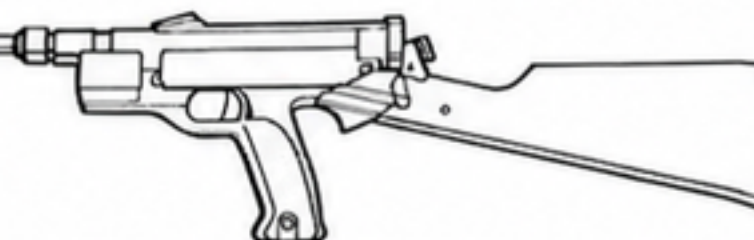

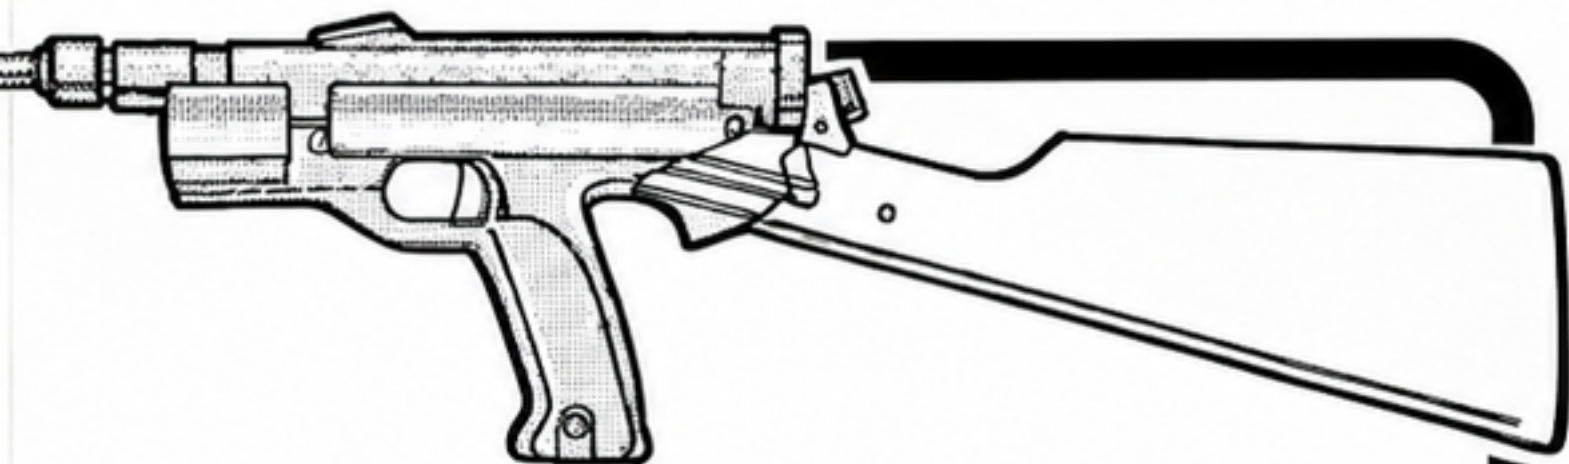

RIFLE

Now turn ON your Computer

Adjust your set so that a clear, bright colour display is obtained. The SLR is sensitive to the light coming from your TV picture and can "see" differences in colour. The distance you can shoot from will depend on the quality of your TV picture. Normally 8-12ft can be achieved on recent models.

Load one of the games supplied (or one of the many others available) and you should now be able to shoot the targets reliably and accurately.

Colour So that the SLR can tell the difference between targets and backgrounds it is *Colour Sensitive*. White & Reds being most visible and Blues least visible. If your set has poor colour balance then you may need to correct this to play colour games properly.

Approved Software To avoid disappointment use only software approved by **Stack** (Ask your dealer for an up to date list of approved software).

Stack produce a range of popular computer accessories for ATARI, BBC, COMMODORE 64, SINCLAIR SPECTRUM, VIC-20 and other popular computers.

Ask your computer dealer for details.

Assembly of your STACK LIGHT RIFLE.

A). Contents

Inside the box should be:-

1. CASSETTE TAPE containing your free game software,
2. S.L.R. trigger unit.
3. S.L.R. butt.
4. S.L.R. barrel.
5. Telescopic sight.
6. Instruction sheet.

B). Assembly Instructions.

Hold the gun in your right hand and the butt in your left hand, with the butt screw uppermost and fully open (anti-clockwise). Place the butt underneath the rear barrel end, and behind the hand grip. Locate the two pegs on the inside front end of the butt into the guides on the barrel (these are immediately below the words "ELECTRONIC TARGET PISTOL").

Now pull the butt upwards and backwards until the butt is fully located and tighten the screw on the butt into the locating hole on the rear barrel end.

The barrel may then be inserted into the other end of the gun with the sights uppermost. The barrel tube is secured by tightening the collar on the main barrel. Please ensure that the barrel tube end with the larger cut out is the end which is matched to the peg inside the main barrel; the smaller cutout is for the end-sight.

The optional telescopic sight may then be attached to the slide on top of the main unit above the trigger.

If you have any problems please contact your supplier who will be pleased to advise you.